


## Fake transom / mullion installation

1. Check the measures
2. Make sure the glass is degreased
3. Remove cover from tape and install


PLEASE NOTE: Top sealing is recommended

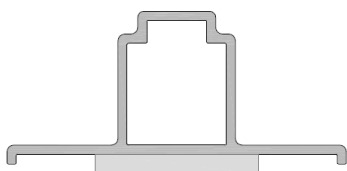

Fake transom BS front 101020  
with double coated foam tape 901001



Fake transom straight contour 101019  
with double coated foam tape 901001

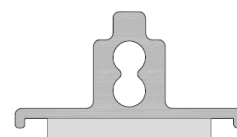

Fake transom 101008  
with double coated foam tape 901001

